ARMOR AE EXPRESS™

MALE/GENDER-NEUTRAL CUSTOM SIZING WITH SIZING VEST INSTRUCTIONS

BEFORE YOU START:

1. Never measure yourself. Grab a friend to help.
2. Wear all of your gear. Uniform, duty belt, tee-shirt - get it all on.
3. Be true to yourself - we won't judge. DO NOT suck in your stomach; sit and stand as you normally would.
4. Submit the completed measurement form with your order.
5. Questions? Contact our Customer Service team at (866) 357-3845 M-F between 8:00 AM – 5:00 PM.

WHAT YOU NEED

- Pen, Pencil, Crayon or Computer if completing digitally
- Armless Chair
- Soft Tape Measure
- Armor Express Sizing Vests

DO NOT USE THIS FORM IF YOU ARE **NOT** USING SIZING VESTS, FOLLOW THE LINK BELOW AND USE THE CUSTOM MEASURING FORMS

ALL FORMS AND CUSTOM SIZING WALK THROUGH VIDEOS CAN BE FOUND AT
HTTPS://WWW.ARMOREXPRESS.COM/FORMS/SIZING-FORMS/

WAIST (Standing) Find the belly button. Using that as your reference point measure around the widest part of the belly. Round **up** to the nearest inch. Match this value on the Male/Gender Neutral Bravo Sizing Chart to determine your initial sizing vest.

DONN VEST AND ADJUST (Standing) Shoulder and waist straps so it provides a proper fit. The center of the top front panel should be aligned with the jugular notch. The top of the back should align with the most prominent cervical vertebrae.

FIT CHECK

Have the officer extend their arms in a driving and shooting position. Check the amount of upper chest coverage received from the sizing panel and ensure it does not limit their range of motion. If needed adjust sizing vest either to a larger or smaller size.

BACK LENGTH MEASUREMENT (Seated) Using the numbered tape extensions at the bottom of the sizing vest find where the tape and duty belt meet. Round **down** to the nearest inch. Add the corresponding value to the back length measurment on the vest label - **this is your back length measurement (ie. 2217).**

FRONT LENGTH MEASUREMENT (Seated) Using the numbered tape extensions at the bottom of the sizing vest find where the tape and duty belt meet. Round **down** to the nearest inch. Add the corresponding value to the front length measurment on the vest label - **this is your front length measurement (ie. 2217).**

OVERLAP PROTECTION (Standing) Adjust the front and back panels so that the panels are meeting or have an equal amount of gap/overlap on both sides. Pull the numbered tape extensions towards the rear panel to match the desired overlap for the officer. Round **up** to the nearest inch – add this to the width size of the back panel, **this is your back width measurement (shown here with a 2" overlap at 2215).**

FINAL CUSTOM SIZED MEASUREMENTS

FRONT WIDTH	FRONT LENGTH	BACK WIDTH	BACK LENGTH
First two numbers Specified on Sizing Vest (ie **22**15)	4	5	3

- IMPORTANT -

- Front Width cannot be more than 3” different from the Back Width
- Front Length cannot be more than 1” different from the Back Length

_____

OFFICER SIGNATURE

CUSTOMER INFORMATION

OFFICER’S FULL NAME _____ HEIGHT _____ WEIGHT _____

DEPARTMENT _____ BADGE NO. _____

SHIPPING ADDRESS _____ DATE _____

CITY _____ STATE _____ ZIP _____

TELEPHONE NO. ( ) _____ E-MAIL ADDRESS _____

DATE SIZED _____ SIZED BY _____ DEALER’S NAME _____

SUBMIT ALL SIZING INFORMATION ALONG WITH YOUR ORDER TO THE FOLLOWING ADDRESS:
ORDERS@ARMOREXPRESS.COM

CUSTOM SIZING VIDEO WALK THROUGHS CAN BE FOUND AT
HTTPS://WWW.ARMOREXPRESS.COM/FORMS/SIZING-FORMS/

CUSTOM SIZING → ALPHA SIZING CONVERSION CHART

If you are purchasing an Alpha-sized carrier vest and would like to convert your custom-sizing measurements to their comparable Alpha size, please use the chart below.

- **FRONT PANEL** is formatted as **[FRONT WIDTH][FRONT LENGTH]**, with both values shown as two numeric characters.
  - EXAMPLE: Front Panel = 1712 means:
    - Front Width = 17”
    - Front Length = 12”

- **BACK PANEL** is formatted as **[BACK WIDTH][BACK LENGTH]**, with both values shown as two numeric characters.
  - **EXAMPLE:** Back Panel = 1712 means:
    - Back Width = 17”
    - Back Length = 12”

If your custom sizing measurements don’t align exactly with the Front Panel/Back Panel values listed in the chart, **round your measurements up** to the next value in the chart to determine your Alpha size.

Our Alpha-sized carriers feature significant adjustability to ensure it will fit you comfortably and safely.

If you have any questions about converting Custom Sizing to Alpha Sizing, please reach out to our Customer Service team at (866) 357-3845 or CustomerService@armorexpress.com. They will answer you as soon as possible Monday – Friday, 8:00 AM – 5:00 PM EST.

BRAVO MALE STANDARD SIZING CHART				
SIZE	CHEST	WAIST	FRONT PANEL	BACK PANEL
XSM	30"-32"	26"-27"	1712	1712
SM	33"-36"	28"-30"	1813	1813
MD	37"-40"	32"-34"	2014	2014
LG	41"-44"	36"-38"	2215	2215
XL	46"-48"	40"-42"	2416	2416
2XL	50"-52"	44"-46"	2617	2617
3XL	54"-56"	48"-50"	2818	2818
4XL	58"-60"	52"-54"	3019	3019

F472 Rev Rel (04/02/2020)

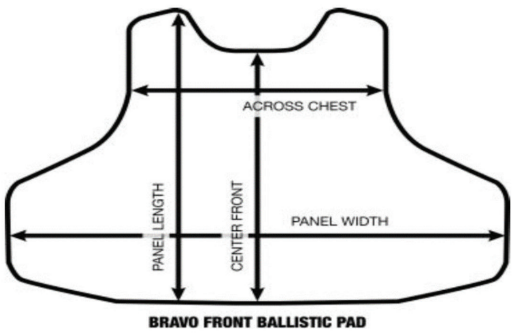

BRAVO FRONT BALLISTIC PAD

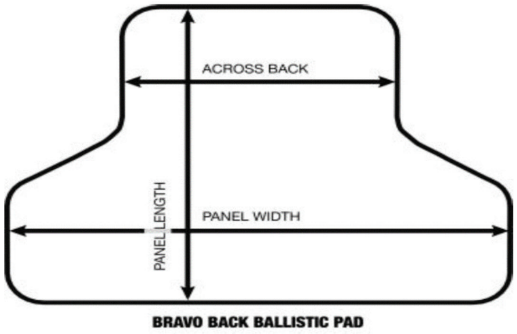

BRAVO BACK BALLISTIC PAD